

- 1 Plywood Deck
- 2 EQUUS Sopradere Quick or Aquadere bitumen primer
- (3) EQUUS DeboPlast, DeboFlex or Debotack 2.5 T/F C175 base sheet
- (4) EQUUS DuO High Tech 4 Slates/F C180 Firecare cap sheet
- (5) EQUUS cap sheet as separate piece over Batten
- (6) Roof Equipment
- (7) EPDM Washer under Screwhead
- (8) Timber Roof Batten

STEP 1: Fixing of the batten



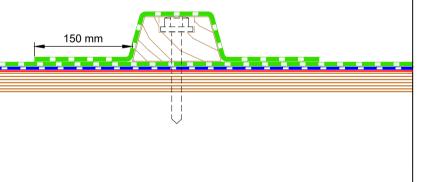

STEP 2: Fixing of the Equipment

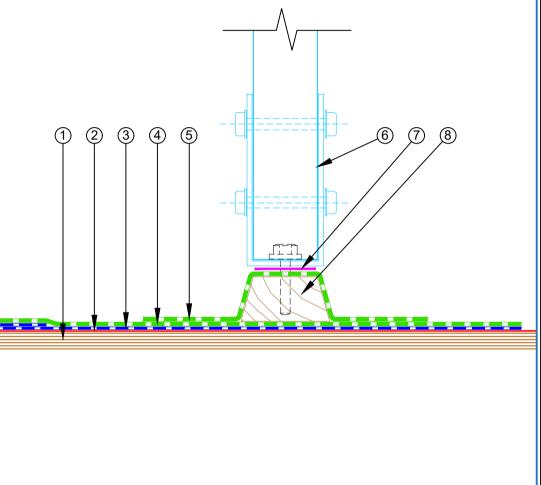

	PROJECT:	Cold Roof on Plywood Standard Detail				
	TITLE :	Roof Eq	uipment Su	upport Batten		
	NUMBER :	SDCRP-D5a			SCALE:	1:4
	DRAWN BY :	NKT	DATE :	09-Dec-2021	REVISED:	
	Equip Meterproof Membrane Details are appointly drawn for use by Legal Authorities, Building Contractors, Equip Applicators, Architects or					

Equus Waterproof Membrane Details are specially drawn for use by Local Authorities, Building Contractors, Equus Applicators, Architects and design professionals. All details are drawn to assist in the development of project specific details. Details may be modified where necessary to accomodate job specific requirements but must be approved by Equus Industries Ltd. All components must be supplied by Equus Industries Ltd. Equus reserves the right to alter or upgrade details at any time without prior notice.

