


NOTE: Fastener spacing to follow De Boer project specific engineered fixing plan.

- ① Concrete Roof Slab laid to Fall
- ② Equus/De Boer Fastener: RBS50 Tube + CS 6.1 Screw
- ③ Equus Vapour Barrier
- ④ Equus PIR Thermal Insulation Board
- ⑤ Equus/De Boer Basesheet
- ⑥ Equus/De Boer Capsheet DuO HT 4 Slates/F C180 FireCare
- ⑦ Equus/De Boer Capsheet as separate piece over Batten
- ⑧ Equus Roof Cover Board
- ⑨ Roof Equipment
- ⑩ EPDM Washer under Screwhead
- ⑪ Timber Roof Batten

STEP 2: Fixing of the Equipment

STEP 1: Fixing of the batten

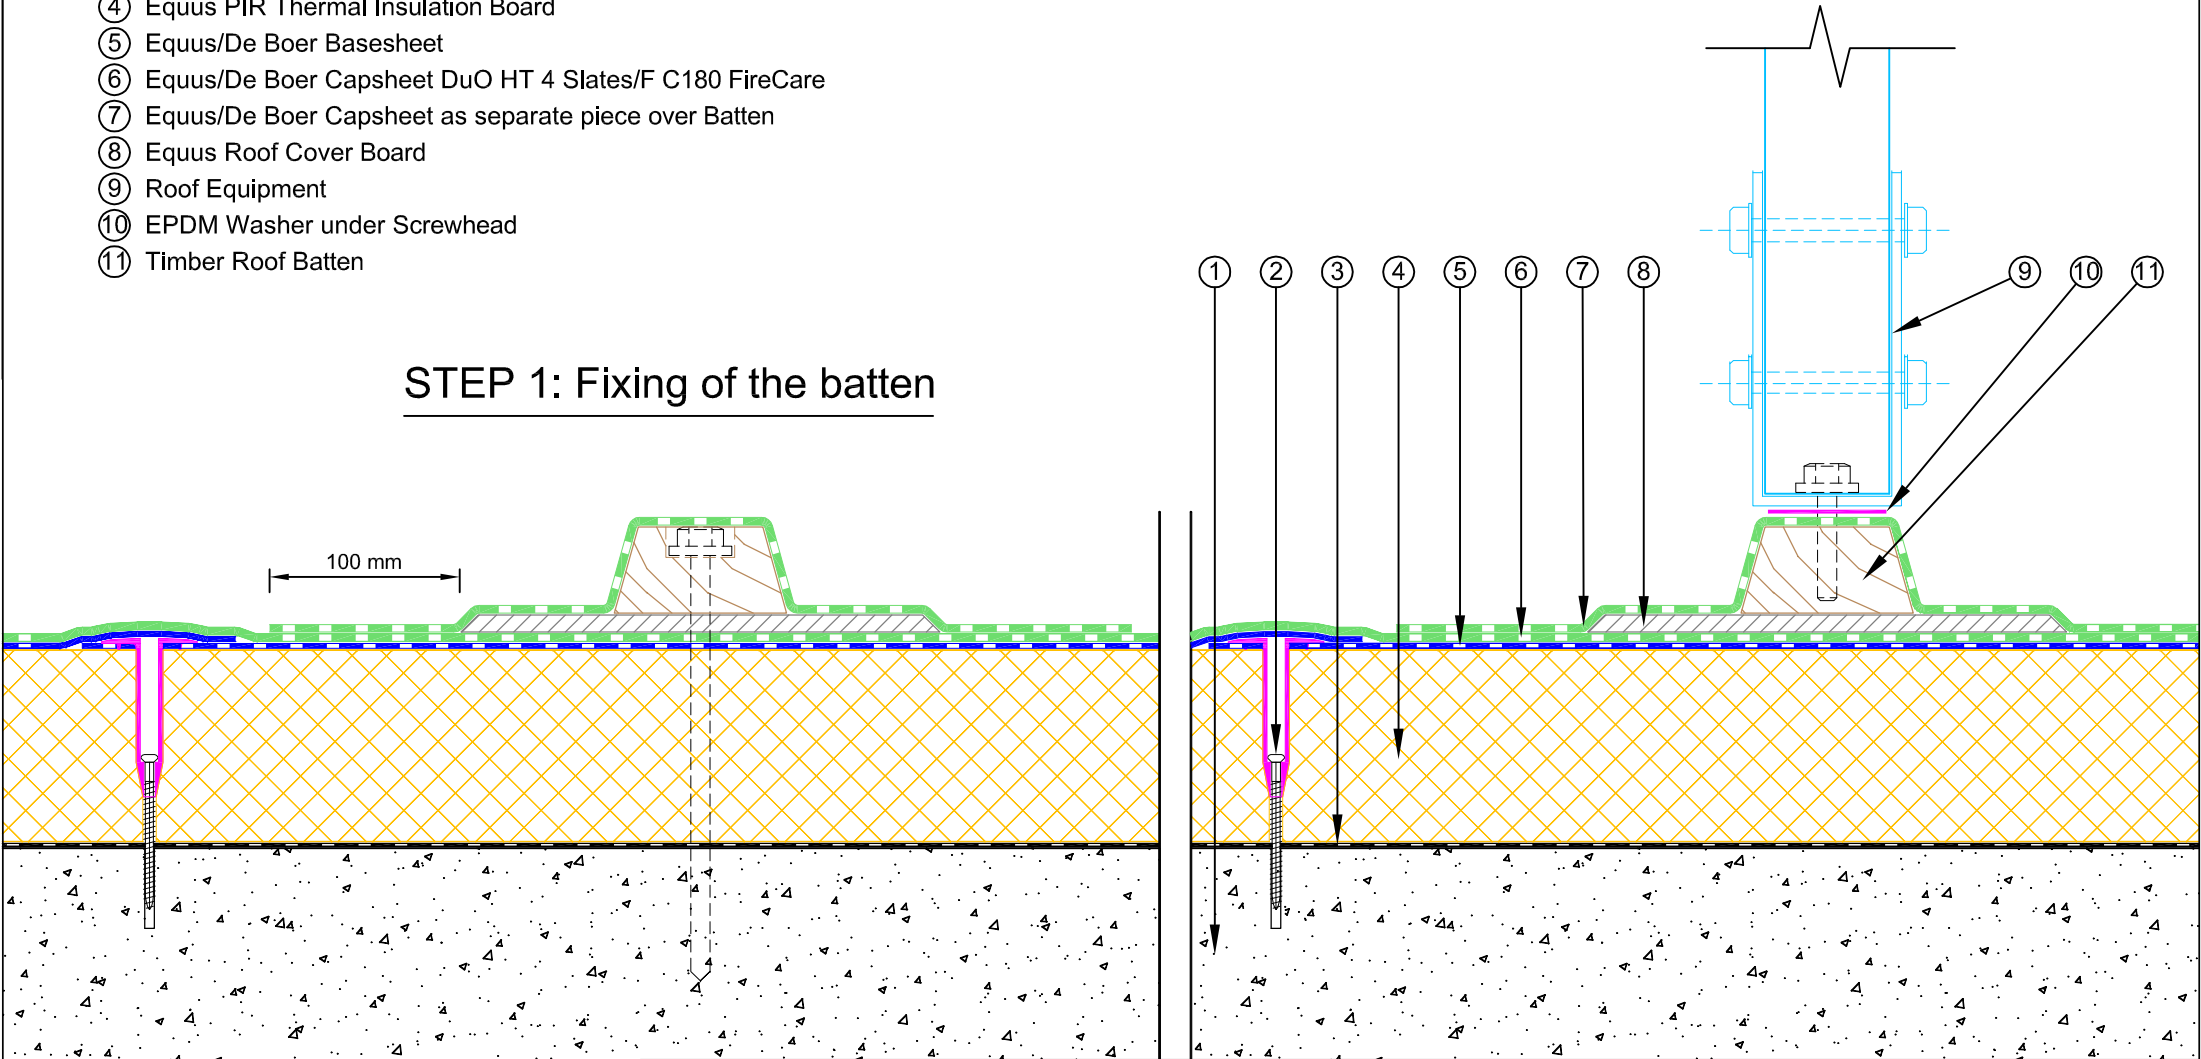

E-mail : admin@equus.co.nz
Web : www.equus.co.nz

**DuOtherm Warm Roof on Concrete
Roof Equipment Support Batten
2 steps detail**

Equus/De Boer Waterproof Membrane Details are specially drawn for use by Local Authorities, Building Contractors, Equus Applicators, Architects and design professionals. All details are drawn to assist in the development of project specific details. Details may be modified where necessary to accommodate job specific requirements but must be approved by Equus Industries Ltd. All components must be supplied by Equus Industries Ltd. Equus Industries Ltd. reserves the right to alter or upgrade details at any time without prior notice.

Drawing No: **DBDTC-D7**
Scale: 1:4 @ A4
Drawn by: JPR
Date: 21/10/2016

