


- ① Plywood Deck
- ② Equus/De Boer DuO Primer
- ③ Equus/De Boer Vapour Barrier
- ④ Equus PIR Thermal Insulation Board
- ⑤ Equus/Dexcell Roof Board
- ⑥ Equus/De Boer DuO Primer, diluted 1:1 with White Spirit
- ⑦ Equus/De Boer Basesheet
- ⑧ Equus/De Boer Capsheet DuO HT 4 Slates/F C180 FireCare
- ⑨ Timber Plinth, glued to Capsheet
- ⑩ Metal Framing Fixing with Neoprene Washer into Timber Plinth, but not through Capsheet underneath
- ⑪ Equus/De Boer Capsheet, as separate piece over Timber Plinth
- ⑫ Clip Ring Fixing with Neoprene Washer into Timber Plinth, but not through Capsheet underneath

A. Clip Ring

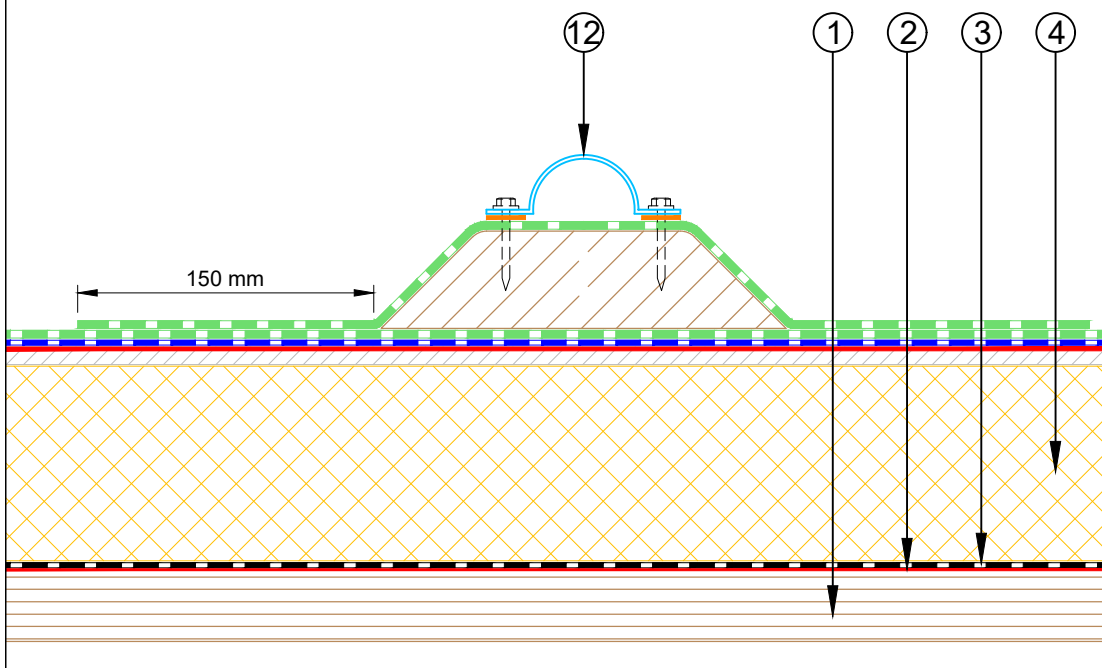

B. Metal Framing

